

目次

DI 機能	3
アドレスマップ	3
サンプルプログラム	4
Usage	5

DI 機能

MA-E3xx シリーズでは CPLD により実装していた、チャタリング除去フィルター、カウンターの機能をマイコンで実装しています。

機能は I2C 経由(Bus No.1, I2C-Address 0x4f)で利用します。

アドレスマップ

DI 機能は I2C の下記アドレスにマップされています。

Name	Address	Bit	Reset Value	Description
Filtered DI(R/O)	0x06	[7:5] Reserved		
		[4] OPT-Switch		OPT-Switch
		[3:0] DI3..0		DI Status ¹⁾
DI Event Enable(R/W)	0x0a	[7:5] Reserved	xxx	
		[4] OPT-Switch	x	OPT-Switch ²⁾
		[3:0] DI3..0 Polarity	0000	0: Rising / 1: Falling
DI Polarity(R/W)	0x0b	[7:5] Reserved	xxx	
		[4] OPT-Switch	x	OPT-Switch ³⁾
		[3:0] DI3..0 Polarity	0000	0: Rising / 1: Falling
Counter Control (R/W)	0x10	[7:5] Reserved	xxx	
		[4] Counter4 Start (OPT-Switch)	0	1: Enable
		[3] Counter3 Start	0	
		[2] Counter2 Start	0	
		[1] Counter1 Start	0	
		[0] Counter0 Start	0	
Counter Match Enable (R/W)	0x11	[7:5] Reserved	xxx	
		[4] Counter4 Match Event Enable	0	1: Enable
		[3] Counter3 Match Event Enable	0	
		[2] Counter2 Match Event Enable	0	
		[1] Counter1 Match Event Enable	0	
		[0] Counter0 Match Event Enable	0	
Counter Match Status (R/W1c)	0x12	[7:5] Reserved	xxx	
		[4] Counter4 Match	0	1: Match / Write 1 to clear
		[3] Counter3 Match	0	
		[2] Counter2 Match	0	
		[1] Counter1 Match	0	
		[0] Counter0 Match	0	
Counter Compare0 (R/W)	0x13	[7:0]	00000000	
Counter Compare1 (R/W)	0x14	[7:0]	00000000	
Counter Compare2 (R/W)	0x15	[7:0]	00000000	

Name	Address	Bit	Reset Value	Description
Counter Compare3 (R/W)	0x16	[7:0]	00000000	
Counter Compare4 (R/W)	0x17	[7:0]	00000000	
Counter Value0 (R/W)	0x18	[7:0]	00000000	
Counter Value1 (R/W)	0x19	[7:0]	00000000	
Counter Value2 (R/W)	0x1a	[7:0]	00000000	
Counter Value3 (R/W)	0x1b	[7:0]	00000000	
Counter Value4 (R/W)	0x1c	[7:0]	00000000	

サンプルプログラム

File	Stat	SHA1SUM	Info
libdi.tar.gz	2021/11/15 13:31 3.1 KB	c23c8d6bffaac9249ea8d2f0be51c049a307c46a	DI サンプル

```
import std/options
import std/strformat
import lib/msp430

proc main() =
  # ライブラリ初期化
  let di = newMsp430(1, 0x4f)

  # Read DI Status
  let di_stat_opt = di.get_di_status()
  if di_stat_opt.isSome:
    echo &"* DI Value: {di_stat_opt.get()}"

  # Read DI Polarity
  let di_pol_opt = di.get_di_polarity()
  if di_pol_opt.isSome:
    echo &"* DI Polarity: {di_pol_opt.get()}"

  for idx in countUp(0, 4):
    # Read DI Counter Enable
    let enable_opt = di.get_counter_onoff(idx)
    if not enable_opt.isSome:
      continue
    let enable = enable_opt.get()
    if enable:
      echo &"* DI[{idx}] Counter is enable."
    else:
      # Enable DI Counter
      let res = di.onoff_counter(idx, true)
      echo &"* DI[{idx}] Counter: set enable -> result: {res}"
```

```
# Read DI Counter Value
let val_opt = di.get_counter_val(idx)
if val_opt.isSome:
  let val = val_opt.get()
  echo &"* DI[{idx}] Counter Value: 0x{val:02x}"

when isMainModule:
  main()
```

Usage

```
root@gemini:~# /tmp/di_sample
* DI Value: @[0, 0, 0, 0, 0]
* DI Polarity: @[Rising, Rising, Rising, Rising, Rising]
* DI[0] Counter: set enable -> result: true
* DI[0] Counter Value: 0x00
* DI[1] Counter: set enable -> result: true
* DI[1] Counter Value: 0x00
* DI[2] Counter: set enable -> result: true
* DI[2] Counter Value: 0x00
* DI[3] Counter: set enable -> result: true
* DI[3] Counter Value: 0x00
* DI[4] Counter: set enable -> result: true
* DI[4] Counter Value: 0x00

root@gemini:~# /tmp/di_sample
* DI Value: @[0, 0, 0, 0, 0]
* DI Polarity: @[Rising, Rising, Rising, Rising, Rising]
* DI[0] Counter is enable.
* DI[0] Counter Value: 0x00
* DI[1] Counter is enable.
* DI[1] Counter Value: 0x00
* DI[2] Counter is enable.
* DI[2] Counter Value: 0x00
* DI[3] Counter is enable.
* DI[3] Counter Value: 0x00
* DI[4] Counter is enable.
* DI[4] Counter Value: 0x04 <----- OPT-Switch をポチポチ押した
```

1)
DI を 64Hz 2bit shift register でフィルタ処理(チャタリング除去)した状態を取得できます

2) 3)

USBのコンソール横の Option Switch

Last update: 2025/02/21 14:15 mas1xx_tips:use_msp430_via_i2c:msp430_di:start https://wiki.centurysys.net/doku.php?id=mas1xx_tips:use_msp430_via_i2c:msp430_di:start&rev=1740114931

From: <https://wiki.centurysys.net/> - **MA-X/MA-S/MA-E/IP-K Developers' WiKi**

Permanent link: https://wiki.centurysys.net/doku.php?id=mas1xx_tips:use_msp430_via_i2c:msp430_di:start&rev=1740114931

Last update: **2025/02/21 14:15**

